

MOOSE RACING®

ADV1 SADDLE BAG

P/N: 3501-1238, 3501-1237



WARNING

ADV1 DRY SADDLEBAG MOUNTING INSTRUCTIONS.

Please read instructions carefully before installation. We recommend this product be installed by a qualified, and experienced technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact Moose Racing or your local dealer for help. It is highly recommended to install saddlebags on a bike with saddlebag racks or supports. The below diagrams show typical installation, your motorcycle may be different so please use diagrams as a guide. It is the rider's responsibility to make sure the product is mounted and secure before each use. Saddlebag and components must not be mounted directly against muffler, other hot parts, and moving parts. Please note that your motorcycle may require a heat shield to prevent saddlebag from direct contact with muffler or heat of exhaust.

Heat shields and saddlebag racks to be purchased separately.

1. Pack contents in bag with heavier items at the bottom for better weight distribution and balance.
2. Close top opening. Push as much air out as possible. Roll top down a minimum of 3 times.
3. Attach side quick release buckles and pull adjuster strap snug. (as shown in image below)



MOOSE RACING®


ADV1 SADDLE BAG

P/N: 3501-1238, 3501-1237



WARNING

4. Top mounting straps can be installed under or over motorcycle seat. Adjust length of top mounting straps to properly fit over or under motorcycle seat. (as shown in image below) Top mounting straps are designed with quick-release buckles for easy removal and mounting of saddlebags. If using under seat mounting method, top straps can be conveniently left in place, under seat, and quick release buckles can be used to disconnect and reconnect saddlebags quickly and easily.

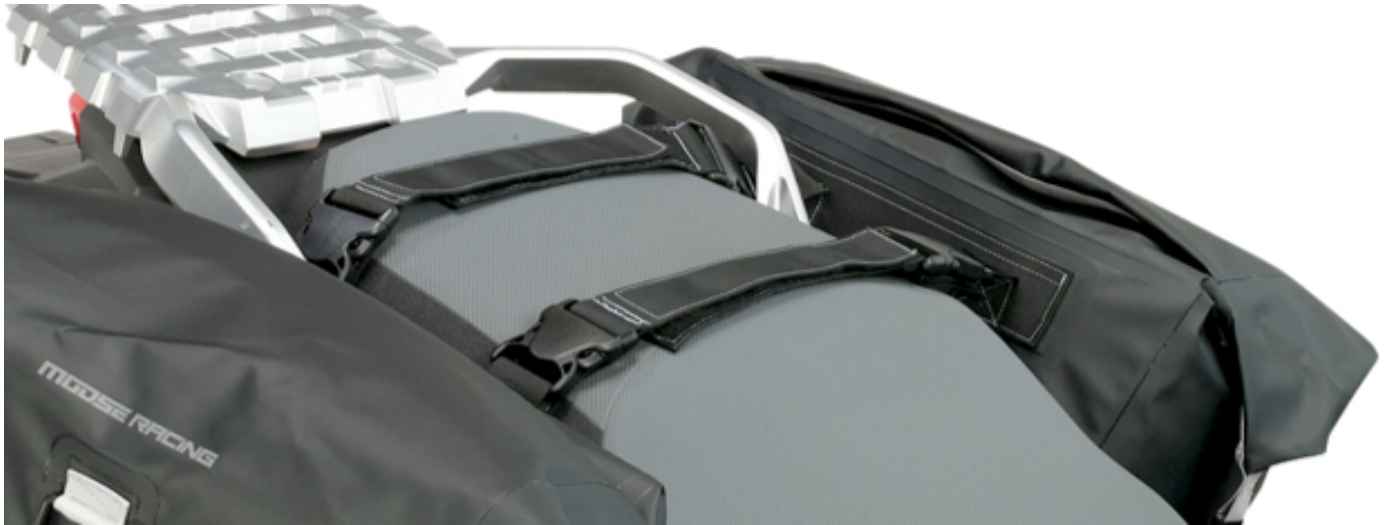

5. Use side mounting strap, and bottom mounting straps, to secure to area of motorcycle. Straps must not be mounted to any hot or moving parts of motorcycle and must not come in contact with any hot or moving parts of motorcycle. Unbuckle strap from bag. Loop strap around motorcycle frame, rear footpeg mount, or other non-moving part of motorcycle. Pass buckle through inside of loop to create a noose. Re-attach strap to buckle on bag, and cinch tight. (as shown in image below)



MOOSE RACING®

ADV1 SADDLE BAG

P/N: 3501-1238, 3501-1237



WARNING

6. Secure all loose ends and keep away from moving or hot parts.

7. After bags are loaded, further adjustment may be needed to ensure the bag does not come into contact with motorcycle's muffler or moving parts. Before operating motorcycle, double check bag and straps are free from any moving and hot parts or surfaces. Recheck all mounting points, stability and condition of bags and mounting straps at stops and before each ride.



Warning:

It is your responsibility to install this product correctly and securely as outlined in these instructions. Product must not be overloaded. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, and reduction in the ability to control the vehicle. The result(s) could lead to serious injury.