

AX1710


KTM 250EXC / 300EXC 250XC-W/ 300XC-W

Xtrem Skid Plate 8mm









2 NE10-01-004 - Alloy spacers

2 NE01-05-008 - Tchc 6x45mm

2 NE01-04-002 - Clamped bolts

6 NE01-04-003 - Em6F

8 NE01-03-001 - M6 Washers

3 NE01-02-004 - Tfhc 6x30mm

1 NE01-02-005 - Tfhc 6x35mm

1 PM01-05-019 - Plastic block 15mm

1 PM01-10-016 - Plastic block 30mm

1 PM01-04-230 - Plastic block 20mm

1 NE04-01-207 - Orange Sticker








VIDEO







Put the clamped bolts inside of the plastic block / Insérer les écrous pinces

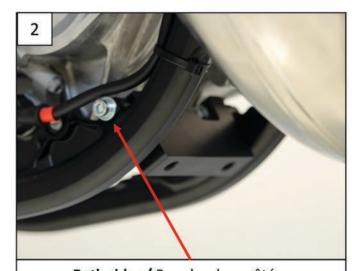

Both sides / Pour les deux côtés : 2 Tchc 6x45mm + 4 M6 washers

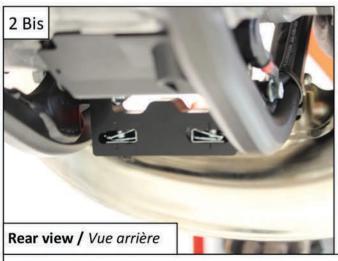


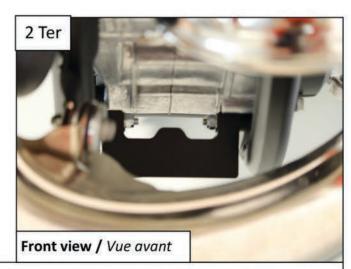


Place the front plastic fixation as shown / Placer la fixation avant suivant les photos : 2 Tchc 6x45mm + 4 M6

Washers + 2 Em6f




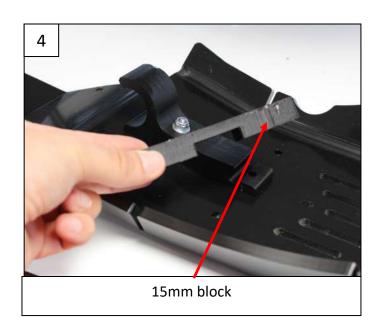



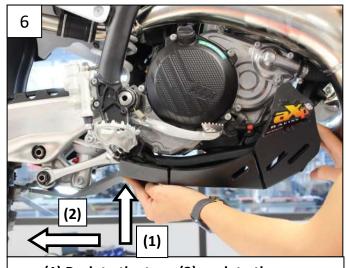

(1) Push to the top , (2) push to the rear (1) Pousser vers le haut, (2) Pousser vers l'arrière

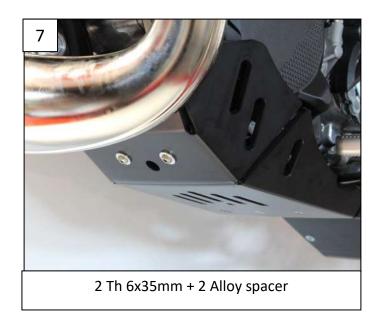

Product information:

- The pictures help to fit the product and do not automatically correspond to the skid plate you have ordered.
- The skid plate is warranty during the first year in case of premature breakage.
- If you ordered the wrong part, please do not try to fit or modify it, write us to contact@axpracing.com