

# Fahrer-Rückenlehne / Drivers Back rest with Pad

**YAMAHA XV 950 / R**

Artikel Nr.: / Item-no.:

**4204538-01** Schwarz/black



(DE) INHALT  
(GB) CONTENTS

1	700008487	Rückenlehne mit Polster	1	700008487	Back rest with pad
2	151.220	Kunsstoffscheiben ø24 x ø8,5 x 2mm	2	151.220	plastic washer ø24 x ø8,5 x 2mm
2	150.923	Linsenkopfschrauben M8x30	2	150.923	filister head screws M8x30
2	150.995	U-Scheiben Ø8,4	2	150.995	washer Ø8,4
2	151.283	Verschlussstopfen ø 8mm	2	151.283	plastic plug ø 8mm



(DE) WICHTIG  
(GB) IMPORTANT

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen. Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist. Anzugsmomente beachten! Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it. First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension. Observe the tightening torques of the manufacturer! Control all screw connections after the assembling for tightness!

Weiteres Zubehör auf unsere Homepage. More accessories: see our homepage.



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Germany

Tel.: +49 (0)6331 - 1453 - 100  
Fax: +49 (0)6331 - 1453 - 120  
eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)

# Fahrer-Rückenlehne / Drivers Back rest with Pad

**YAMAHA XV 950 / R**

Artikel Nr.: / Item-no.:

**4204538-01** Schwarz/black



MONTAGEANLEITUNG  
 MOUNTING INSTRUCTIONS

## Vorbereitung:

Fahrer und Soziussitzbank abnehmen.  
Die beiden Halter der Soziussitzbank  
demontieren - diese entfallen.

## Befestigung der Rückenlehne:

An den nun freien Gewindebohrungen  
des vorderen Halters mit den Linsenkopf-  
schrauben M8x30 sowie U-Scheiben  
Ø8,4.

Zwischen Rückenlehne und Kotflügel die  
Kunststoffscheiben Ø24xØ8,5x2mm  
fügen.


In die freien Gewinde des hinteren Halters  
die Verschlußstopfen Ø8mm stecken.

## Preparing:

Remove driver and passenger seat .  
Dismantle the two holders of the  
passenger seat.  
At the now freely threads the back rest  
will be screwed.

## Fastening of the back rest:

with filister head screws M8x30 and  
washer Ø8,4. Add plastic washer  
Ø24xØ8,5x2mm between back rest and  
fender. Close the free threads of the rear  
holder with the plastic plugs Ø 8mm.

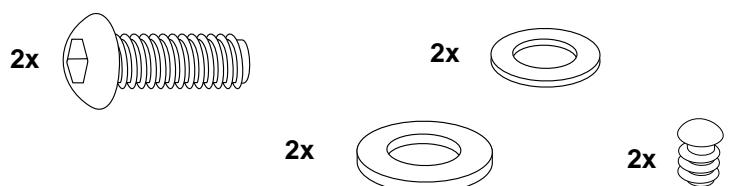

Das Polster ist kombinierbar mit dem  
Solorack ohne Rückenlehne Nr. 6004539.

The back rest can be combined with  
Solorack without back rest 6004539.

