

# ANBAUANLEITUNG

mounting instructions • instructions de montage • instrucciones de montaje • istruzioni di montaggio

## HDG.00.220.22700/B

beinhaltet • contains • contient • contiene • contiene


HDG.00.220.82700/B

HDG.00.220.10300/B

Item number: HDG.00.220.82700/B

Revision: 00 • Date: 07 - 2025

## Handguard mounting kit

 ~ 0.5 h.EASY      DIFFICULT


**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.


Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.


This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.


These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.


## SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:


 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!


 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!


 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

## GENERAL INFORMATION


 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.


 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



✉ info@sw-motech.com  
🌐 www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:  
**[www.sw-motech.com](http://www.sw-motech.com)**


































**Use thread locker:** Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



**Tighten/note the tightening torque information:** Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

# PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!

|   |   |  |  |   |  |   |
|---|---|--|--|---|--|---|
| 1 | <div><div>1</div><div></div></div> <div>HDG.00.220.904.01.02</div> <div><div></div>1/1</div>                                | <div><div>2</div><div></div></div> <div>HDG.00.220.905.01.02</div> <div><div></div>1/1</div>                       | <div><div>3</div><div></div></div> <div>HDG.11.953.001L.11</div> <div><div></div>1/1</div>                           | <div><div>4</div><div></div></div> <div>HDG.11.953.001R.11</div> <div><div></div>1/1</div> | <div><div>5</div><div></div></div> <div>M6 x 20; DIN 7380<br/>SC.ST.06.020.02.7380.109</div> <div><div></div>2/2</div> |   |
| 2 | <div><div>6</div><div></div></div> <div>HDG.00.220.030L.25</div> <div><div></div>1/1</div>                                  | <div><div>7</div><div></div></div> <div>HDG.00.220.030R.25</div> <div><div></div>1/1</div>                         | <div><div>8</div><div></div></div> <div>M6 x 40; DIN 912<br/>SC.ST.06.040.02.912.088</div> <div><div></div>2/2</div> | <div><div>9</div><div></div></div> <div>HDG.00.220.012.25</div> <div><div></div>2/2</div>   | <div><div>10</div><div></div></div> <div>HDG.00.220.073.35</div> <div><div></div>2/2</div>                             | <div><div>11</div><div></div></div> <div>Ø 18 / ø 6,4 / h 10<br/>DB.00.180.064.010.01</div> <div><div></div>2/2</div> |
|   | <div><div>12</div><div></div></div> <div>Ø 18 / ø 10,5 / h 12<br/>DB.ST.0180.0105.0120.48</div> <div><div></div>2/2</div> |  |  |   |  |   |
| 3 | <div><div>13</div><div></div></div> <div>M6 x 22; DIN 7991<br/>SC.ST.06.022.48.7991.088</div> <div><div></div>2/2</div> | <div><div>14</div><div></div></div> <div>ø 6.4; DIN 9021<br/>US.ST.064.02.9021</div> <div><div></div>2/2</div> | <div><div>15</div><div></div></div> <div>M6; DIN 6927<br/>MU.ST.06.02.6927.08</div> <div><div></div>2/2</div>    |   |  |   |

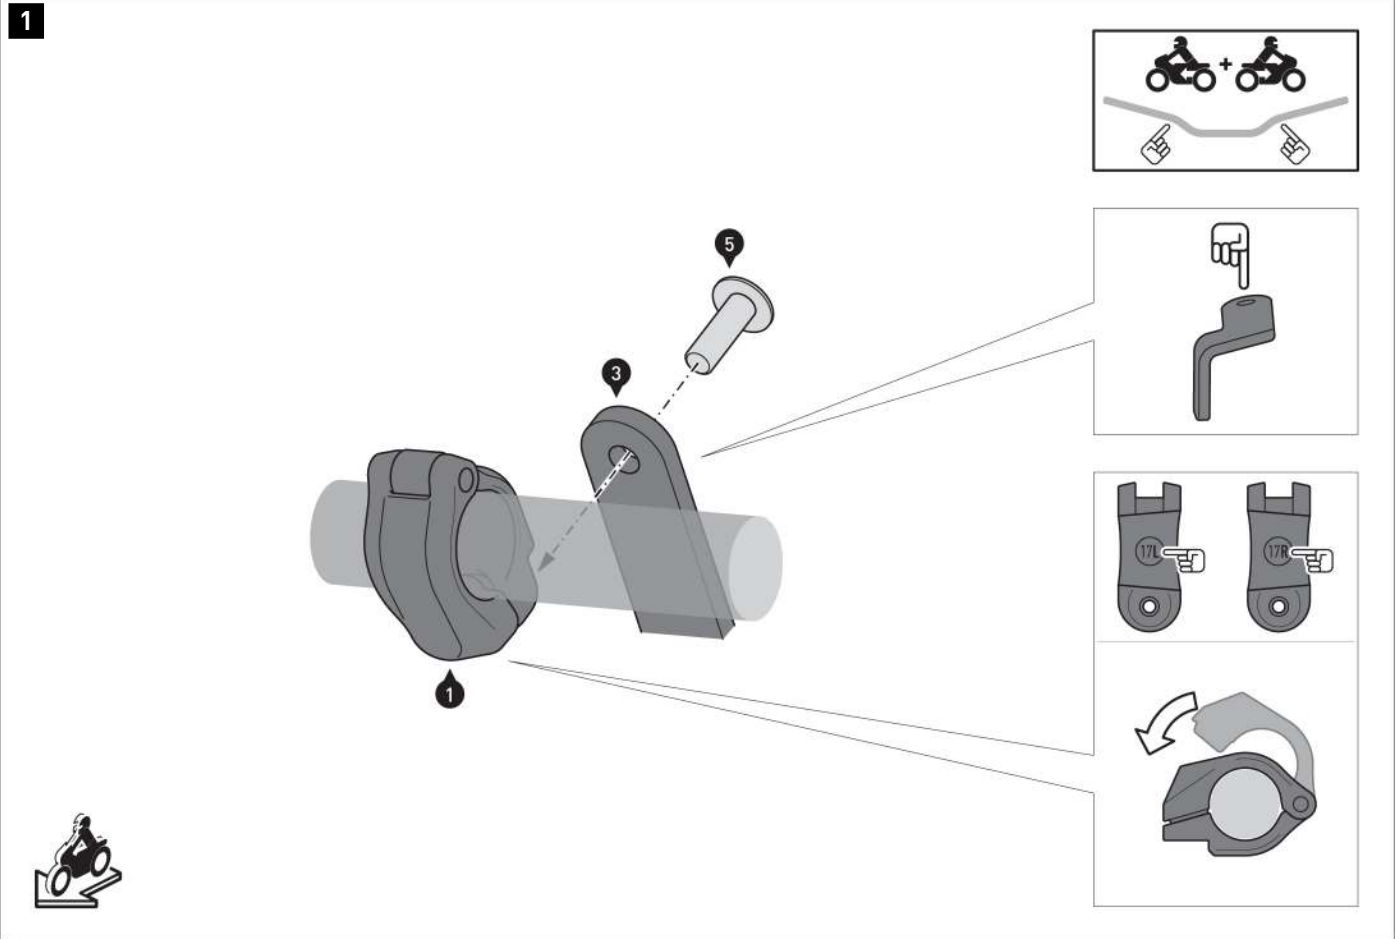

**⚠ WARNING:** Because the handguard mounting kit is in a safety-relevant area of the bike, SW-MOTECH recommends having the assembly/maintenance of the product carried out by a specialist workshop.

**⚠ WARNING:** Always wear eye and hand protection.

**⚠ WARNING:** Always use suitable tools.

**⚠ NOTE:** The assembly is shown on the left side. Repeat the assembly with the appropriate parts on the right handlebar side.

**⚠ NOTE:** The handlebar shown is for example purposes only.

**⚠ NOTE:** The connecting plate (3/4) shown in the drawing serves as an example: The correct representation and alignment of the connecting plate are shown in the right detailed drawing.

Place the clamps (1/2) around the handlebar at the locations shown in the detailed drawing above.



Loosely screw the connector plates (3/4) to the clamps (1/2). The clamps (1/2) must remain loose to allow for proper positioning.

**⚠ WARNING:** Use liquid threadlocker.



Tighten the screws (5) hand tight.



M 8 Nm

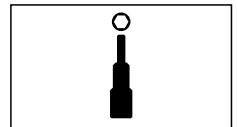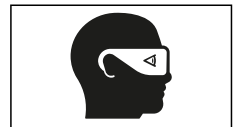

2

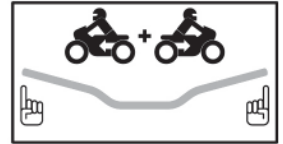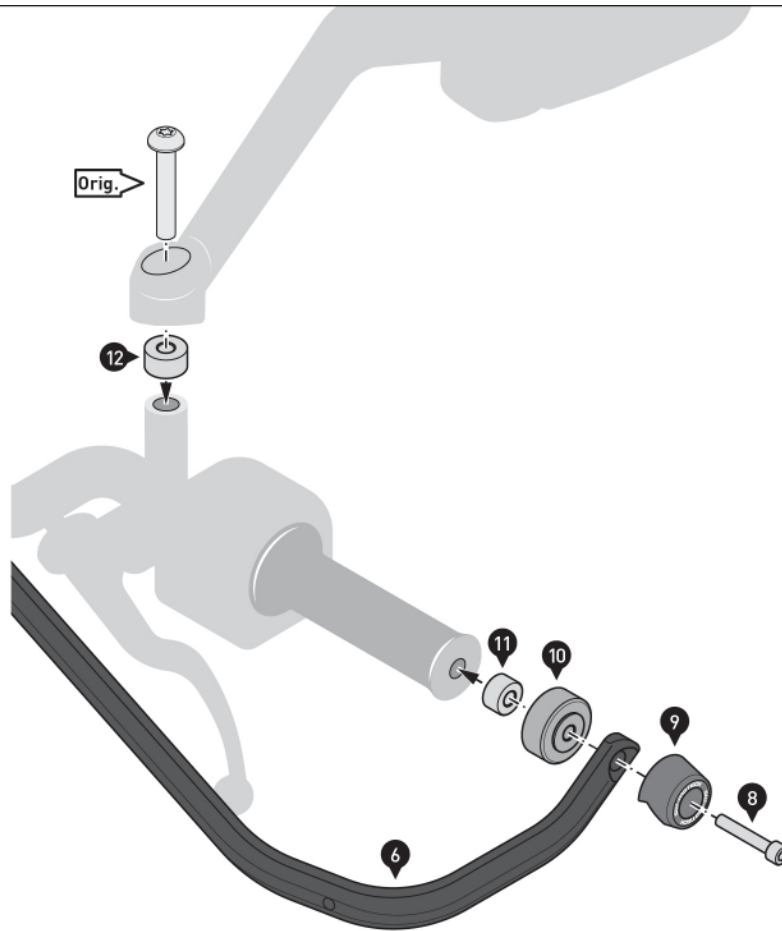

Remove the original end weights and handguards if mounted.  
Make sure the handlebar ends and the inside of the handlebars are clear.

Remove the original mirrors.

Loosely screw the parts shown to the handlebar ends using the brackets (6/7).

**▲ WARNING: Use liquid threadlocker.**




To do this, tighten the screws (8) until the brackets (5/6) can still be adjusted.

Screw the original mirrors to the handlebar using the spacers (12) and the original screws (Orig.).






Adjust the mirrors according to the manufacturer's specifications and your ergonomics.

**▲ WARNING: Use liquid threadlocker.**

Tighten the original screw (Orig.) according to the bike manufacturer's specifications.

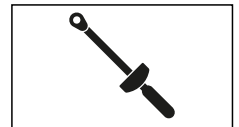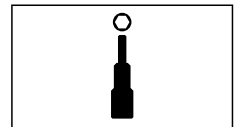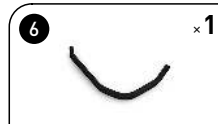

3

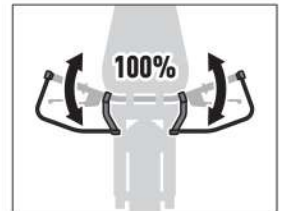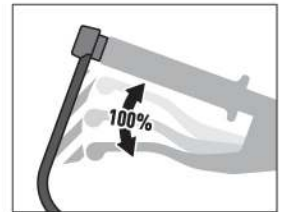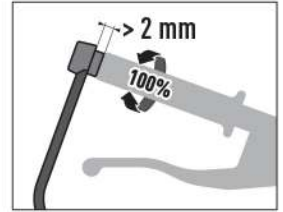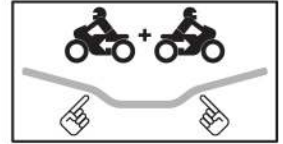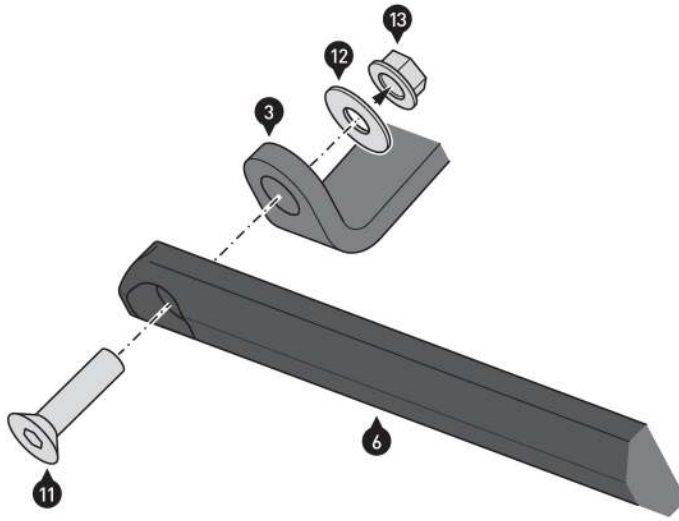

Screw the inner ends of the brackets (6/7) to the connecting plates (3/4). Do not tighten the screws (13) yet.

Now position the brackets (6/7) according to your driving ergonomics, and tighten all screws in the following order and as specified in the mounting instructions: (13), (5), (8).


**⚠ DANGER:** If the space available after assembly of all components is too tight, the brake and clutch unit must be moved a few millimetres towards the end or the middle of the handlebar.

**⚠ DANGER:** After assembly, ensure that all switches and control units, especially the throttle grip, brake pedal, emergency stop switch, and clutch are in perfect working order and easy to use.

Also ensure that the handlebar can be turned fully in both directions. If parts of the product make contact with the tank or other vehicle components when the handlebar is fully turned, it is essential to reposition the product and/or the handlebar.

Make sure that it complies with the specifications of the bike manufacturer. Do NOT ride your bike if the switch and control units do not function or operate correctly.

Before every trip, carry out a complete functional check of the handlebars and all fittings.

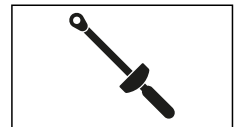

**PRODUCT-SPECIFIC NOTES**


**⚠ NOTE** :Observe the country-specific regulations for the registration/operation of your vehicle and any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your inspection centre after they have been installed.



Item number: HDG.00.220.10300/B

Revision: 01 • Date: 12 - 2023

## Sport handguard shell set

 ~ 0.25 h.EASY      DIFFICULT


**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.


Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.


This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.


These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.


## SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:


 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!


 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!


 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

## GENERAL INFORMATION


 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.


 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



✉ info@sw-motech.com  
🌐 www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:  
**[www.sw-motech.com](http://www.sw-motech.com)**



**Do not use thread lock:** Indicates that no liquid thread lock should be used at this point.



**Tighten by hand:** Indicates that the attachment must be carefully tightened by hand.

**PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!**

**1**

1



HDG.00.220.004L.02

 **1/1**

2



HDG.00.220.004R.02

 **1/1**

3



HDG.00.220.006.02


 **4/4**

4



M3,5 x 12  
SC.ST.035.012.02

 **8/8**


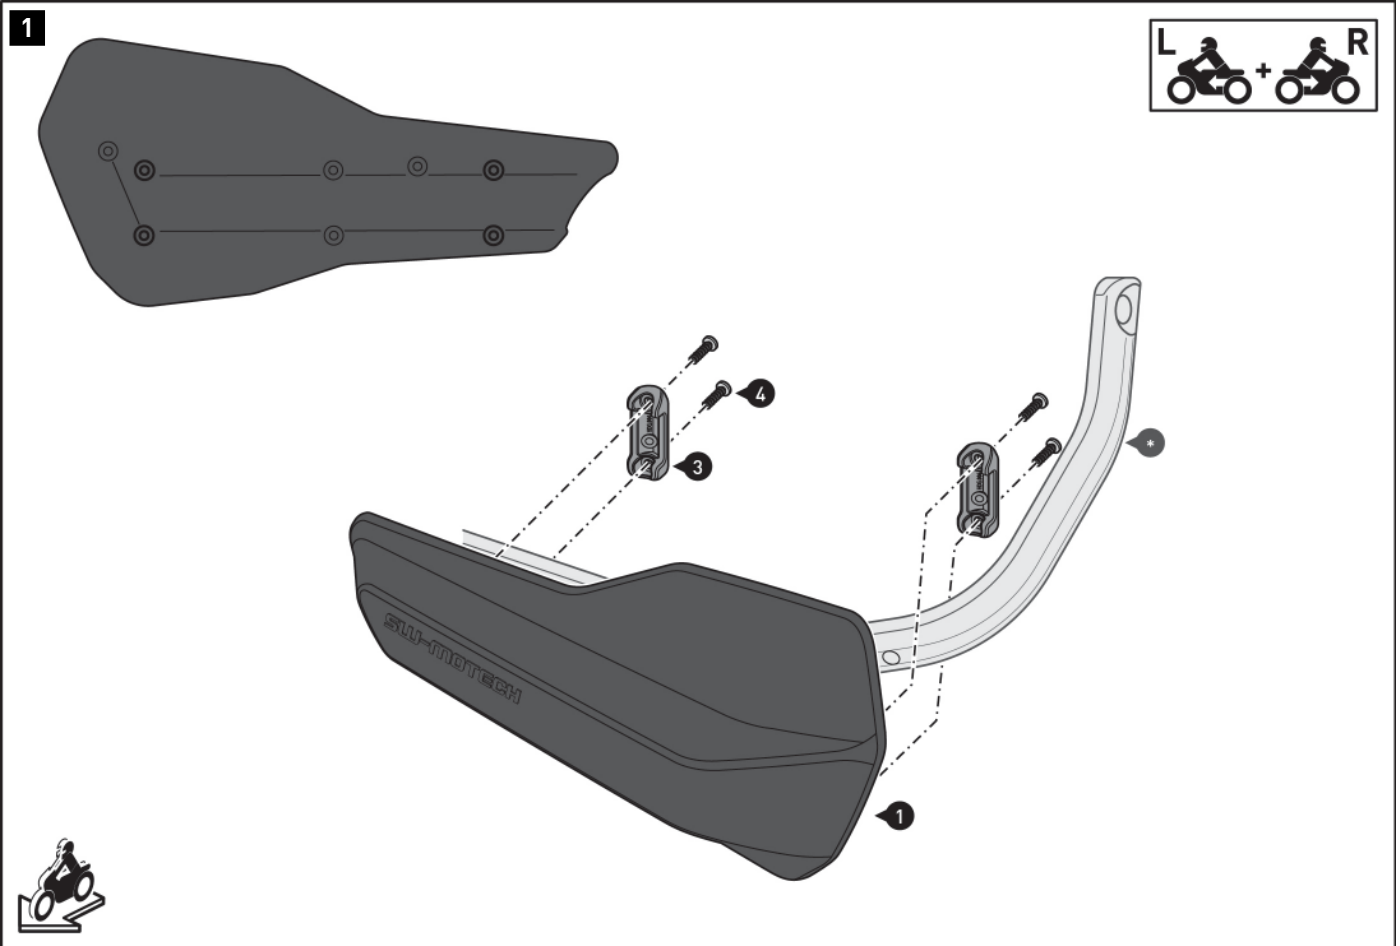


**⚠ WARNING:** Always wear eye and hand protection!  
**⚠ WARNING:** Always use the proper tools!

**⚠ NOTE:** Installation is shown on the left side. Repeat the installation with the corresponding parts on the right side of the handlebar.

Screw the sports hand-guard shells (1/2) onto the brackets (\*).  
 Carefully tighten the screws (4) hand-tight (max. 1 Nm).

**⚠ WARNING:** Tightening too tightly can damage the plastic parts!

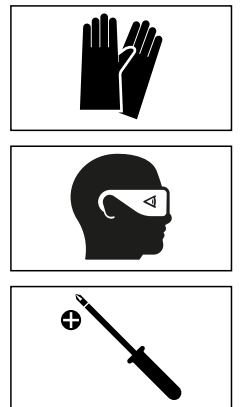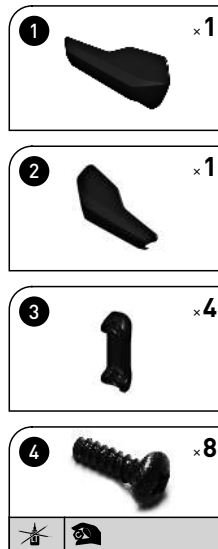

**PRODUCT-SPECIFIC NOTES**

**⚠ NOTE:** *Observe the country-specific regulations for the registration/operation of your vehicle or applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.*