

ANBAUANLEITUNG

mounting instructions • instructions de montage • instrucciones de montaje • istruzioni di montaggio

HDG.00.220.31200/B

beinhaltet • contains • contient • contiene • contiene


HDG.00.220.81200/B

HDG.00.220.10000/B

Item number: HDG.00.220.81200/B

Revision: 00 • Date: 07 - 2025

Handguard mounting kit

 ~ 0.5 h.
EASY      DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



info@sw-motech.com
www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:
www.sw-motech.com












Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.






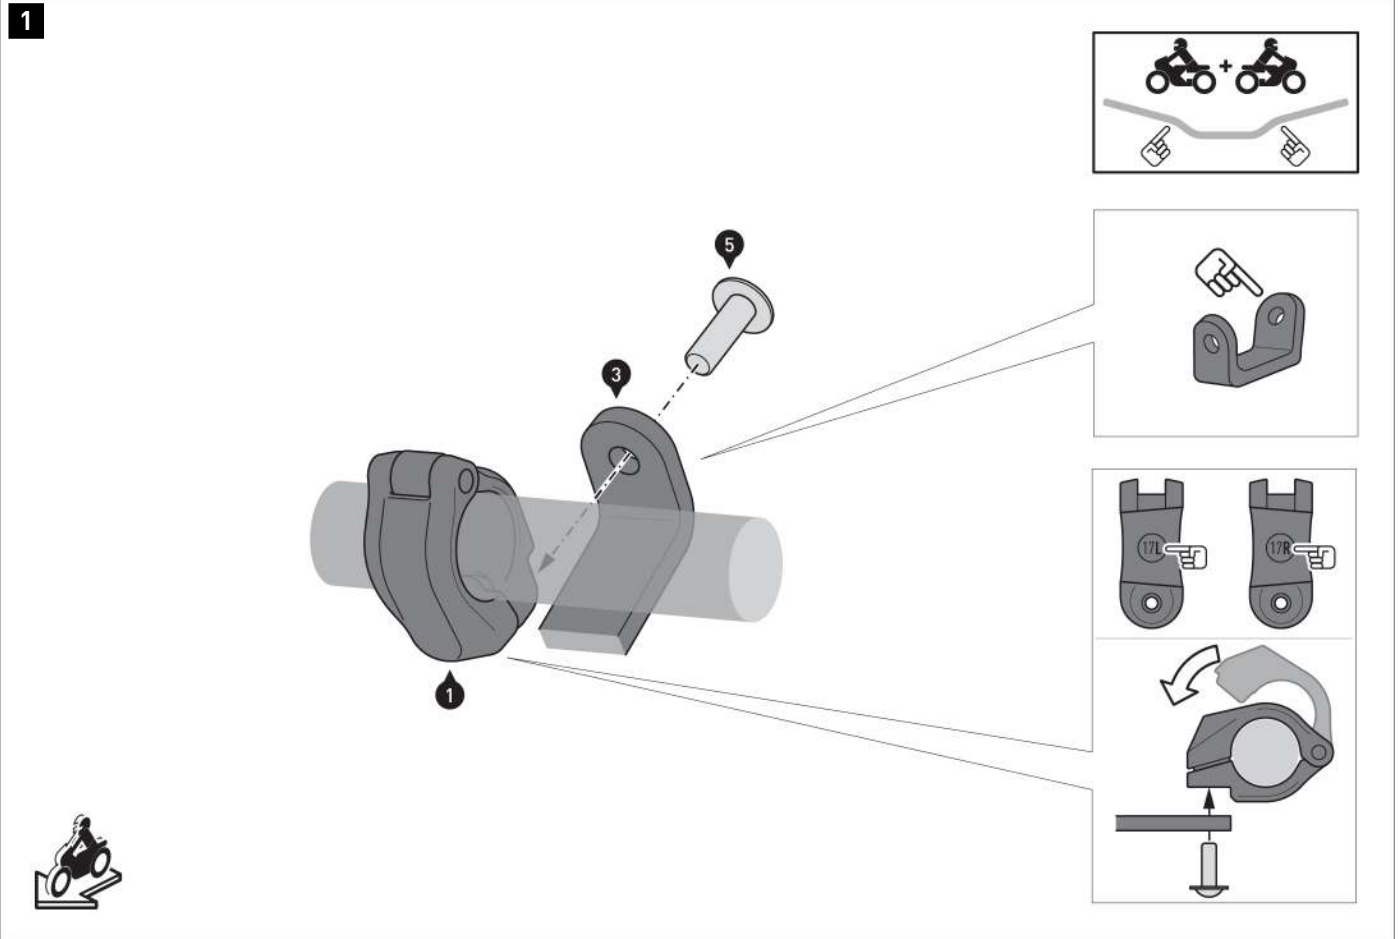
Tighten/note the tightening torque information: Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!

1	<div data-bbox="151 145 199 212">1</div>  <div data-bbox="183 392 327 414">HDG.00.220.904.01.02</div> <div data-bbox="215 414 295 448">1/1</div>	<div data-bbox="375 145 422 212">2</div>  <div data-bbox="406 392 550 414">HDG.00.220.905.01.02</div> <div data-bbox="438 414 518 448">1/1</div>	<div data-bbox="598 145 646 212">3</div>  <div data-bbox="630 392 774 414">HDG.07.897.001L.11</div> <div data-bbox="662 414 742 448">1/1</div>	<div data-bbox="821 145 869 212">4</div>  <div data-bbox="853 392 997 414">HDG.07.897.001R.11</div> <div data-bbox="885 414 965 448">1/1</div>	<div data-bbox="1045 145 1093 212">5</div>  <div data-bbox="1077 369 1252 414">M6 x 20; DIN 7380 SC.ST.06.020.02.7380.109</div> <div data-bbox="1125 414 1204 448">2/2</div>
---	---	---	---	---	---

2	<div data-bbox="151 472 199 539">6</div>  <div data-bbox="183 716 327 739">HDG.00.220.021L.25</div> <div data-bbox="215 739 295 775">1/1</div>	<div data-bbox="375 472 422 539">7</div>  <div data-bbox="406 716 550 739">HDG.00.220.021R.25</div> <div data-bbox="438 739 518 775">1/1</div>	<div data-bbox="598 472 646 539">8</div>  <div data-bbox="614 694 798 739">M10 x 55; DIN 6912 SC.ST.10.055.02.6912.088</div> <div data-bbox="662 739 742 775">2/2</div>	<div data-bbox="821 472 869 539">9</div>  <div data-bbox="853 716 997 739">HDG.00.220.010.25</div> <div data-bbox="885 739 965 775">2/2</div>	<div data-bbox="1045 472 1093 539">10</div>  <div data-bbox="1077 694 1252 739">Ø 20 / ø 10,5 / h 10 DB.00.200.105.010.01</div> <div data-bbox="1125 739 1204 775">2/2</div>
---	---	---	--	--	---

3	<div data-bbox="151 797 199 864">11</div>  <div data-bbox="167 1019 343 1064">M6 x 22; DIN 7991 SC.ST.06.022.48.7991.088</div> <div data-bbox="215 1064 295 1099">2/2</div>	<div data-bbox="375 797 422 864">12</div>  <div data-bbox="406 1019 550 1064">ø 6.4; DIN 9021 US.ST.064.02.9021</div> <div data-bbox="438 1064 518 1099">2/2</div>	<div data-bbox="598 797 646 864">13</div>  <div data-bbox="630 1019 790 1064">M6; DIN 6927 MU.ST.06.02.6927.08</div> <div data-bbox="662 1064 742 1099">2/2</div>
---	--	---	--



⚠ WARNING: Because the handguard mounting kit is in a safety-relevant area of the vehicle, SWMOTEC recommends having the assembly/maintenance of the product carried out by a qualified specialist workshop.

⚠ WARNING: Always wear eye and hand protection.

⚠ WARNING: Always use suitable tools.

⚠ NOTE: The assembly is shown on the left side. Repeat the assembly with the appropriate parts on the right handlebar side.

⚠ NOTE: The handlebar shown is for example purposes only.



⚠ NOTE: The connecting plate (3) shown in the drawing serves as an example. The correct representation and alignment of the connecting plate are shown in the right detailed drawing.


Place the clamps (1/2) on the position shown in the upper detail drawing around the handlebars.

Loosely screw the connecting plates (3/4) to the clamps (1/2). The clamps (1/2) must remain movable for positioning purposes.

⚠ WARNING: Use liquid threadlocker.

Tighten the screws (5) hand tight.

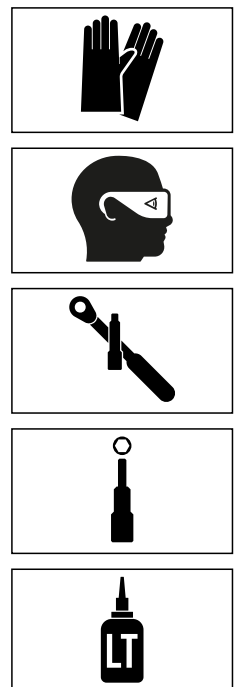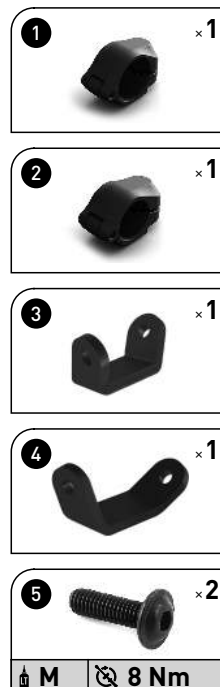

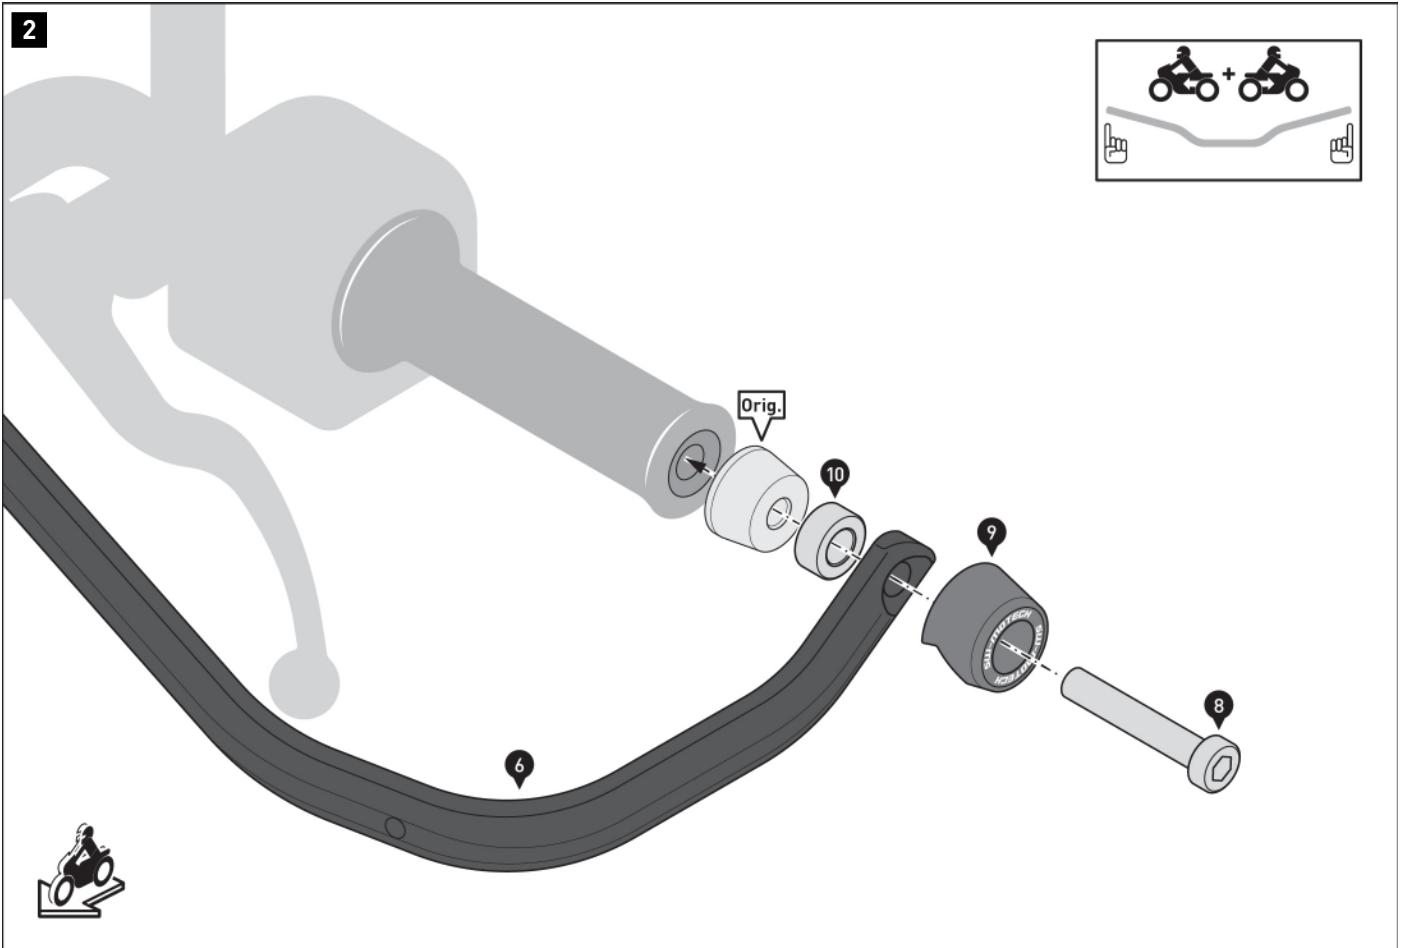


Remove the original end weights and hand protectors if they have been mounted.
Make sure that the handlebar ends and the inside of the handlebar are clear .






Loosely screw the parts shown with the brackets (6/7) and the original end weights (Orig.) onto the handlebar ends.

▲ WARNING: Use liquid threadlocker.

To do this, tighten the screws (8) just enough so that the brackets (6/7) can still be readjusted.

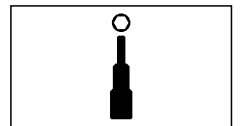

3

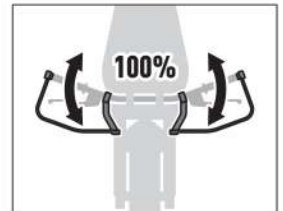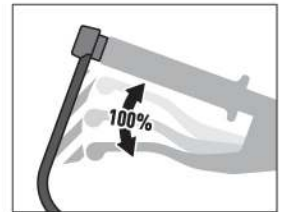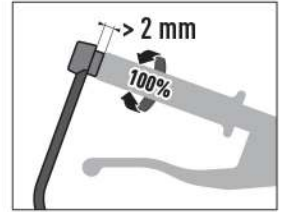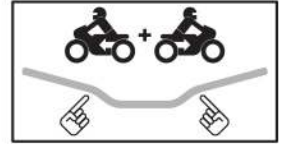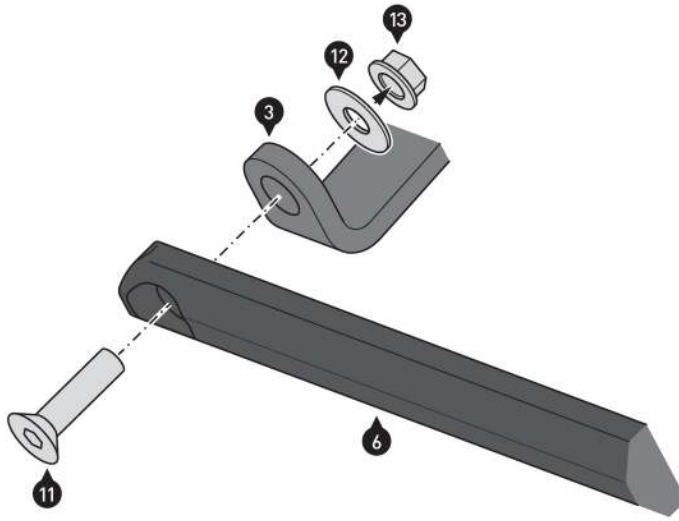



Screw the inner ends of the brackets (6/7) to the connecting plates (3/4).
Do not tighten the screws (11) yet.

Now position the brackets (6/7) according to your driving ergonomics, and tighten all screws in the following order and as shown in the mounting instructions: (11), (5), (8).

⚠ DANGER: If the space available after assembly of all components is too tight, the brake and clutch unit must be moved a few millimetres towards the end of the handlebar or the middle of the handlebar.

⚠ DANGER: After installation, make sure that all switch and control units, especially the throttle, brake lever, emergency stop switch, and clutch work perfectly and are easy to operate. Also ensure that the handlebars can be turned fully in both directions. If any parts of the product come into contact with the tank or other vehicle components when the handlebars are fully turned, it is absolutely necessary to reposition the product and/or the handlebars.

Make sure that everything complies with the vehicle manufacturer's specifications! DO NOT operate your vehicle if the switch and control units are not functioning correctly or cannot be operated properly. Before every trip, carry out a complete functional check of the handlebars and all fittings.

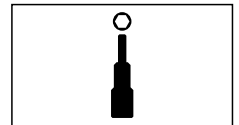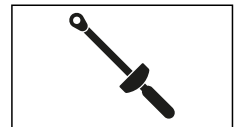

PRODUCT-SPECIFIC NOTES

⚠ NOTE :Observe the country-specific regulations for the registration/operation of your vehicle and any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your inspection centre after they have been installed.

Item number: HDG.00.220.10000/B

Revision: 01 • Date: 12 - 2023

Adventure handguard shell set

 ~ 0.25 h.EASY      DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.


SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



info@sw-motech.com
www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:
www.sw-motech.com
















Do not use thread lock: Indicates that no liquid thread lock should be used at this point.



Tighten by hand: Indicates that the attachment must be carefully tightened by hand.

PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!

1	<div>1</div> 	<div>2</div> 	<div>3</div> 	<div>4</div> 	<div>5</div> 	<div>6</div> 
	HDG.00.220.002L.02	HDG.00.220.002R.02	HDG.00.220.008L.02	HDG.00.220.008R.02	HDG.00.220.009.02	M3,5 x 12 SC.ST.035.012.02
	 1/1	 1/1	 1/1	 1/1	 4/4	 8/8

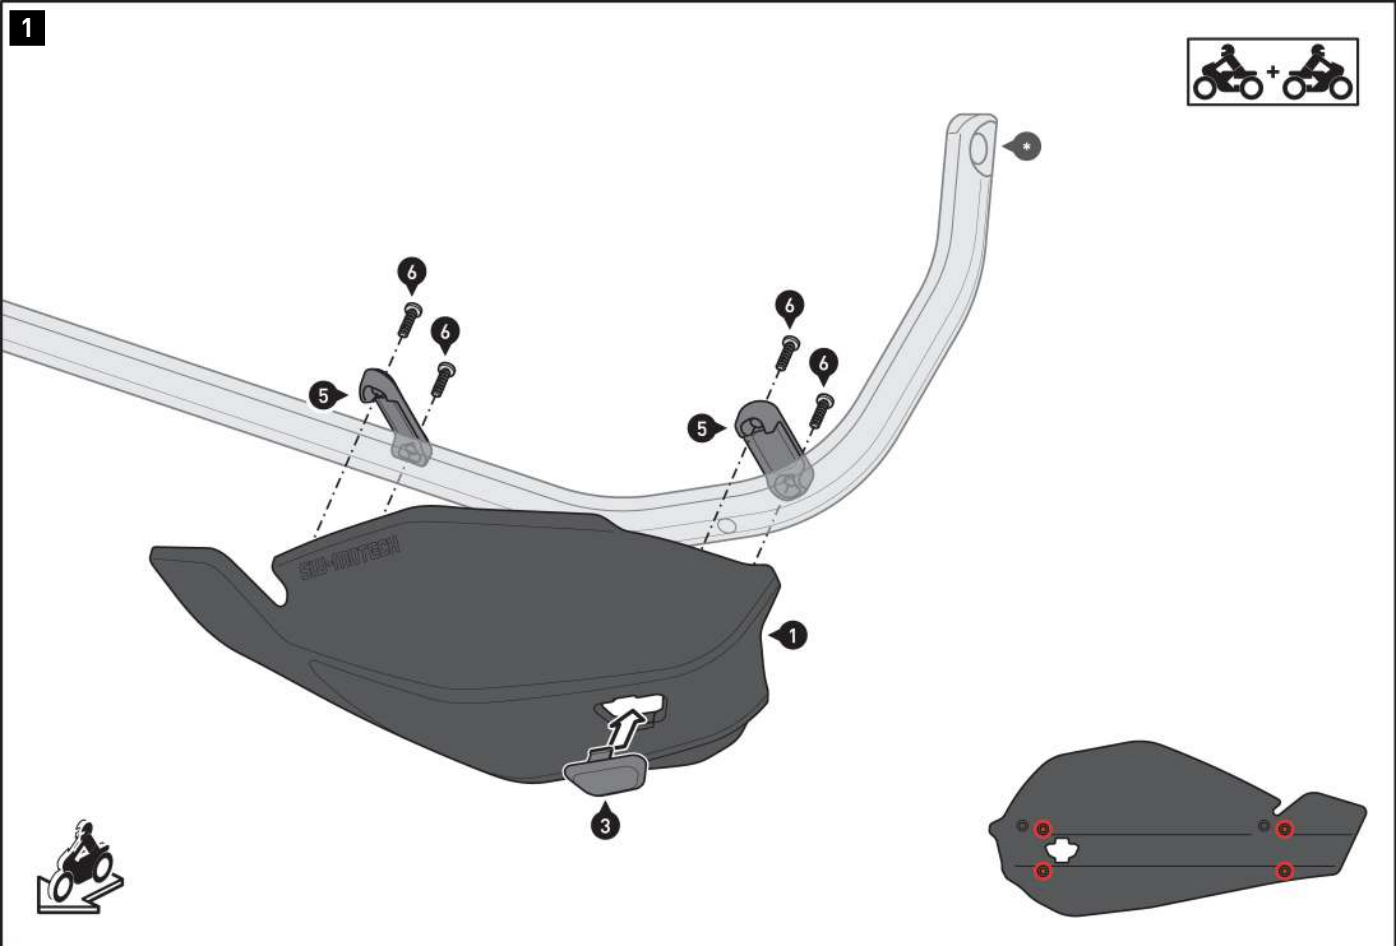


⚠ WARNING: Always wear eye and hand protection!
⚠ WARNING: Always use the proper tools!

⚠ NOTE: Assembly is shown on the left side. Repeat the assembly with the corresponding parts on the right.

⚠ NOTE: Pay attention to the L marking (left) or R marking (right) of the plastic caps (3/4). Insert the plastic caps (3/4) into the openings of the Adventure hand-guard shells (1/2).

Screw the Adventure hand-guard shells (1/2) onto the brackets (*). Carefully tighten the screws (5) hand-tight (max. 1 Nm).

⚠ WARNING: Tightening too tightly can damage the plastic parts!

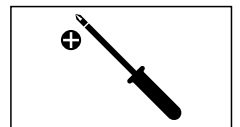

PRODUCT-SPECIFIC NOTES

⚠ NOTE: *Observe the country-specific regulations for the registration/operation of your vehicle or applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.*