



www.barkbusters.net

FITTING INSTRUCTIONS for...


• CF Moto 700MT (2025 - on)

Preparation

Remove original handguards and bar end weights if fitted.

Fitting note

Ensure handlebar is position is in standard position, with long line even with triple clamp

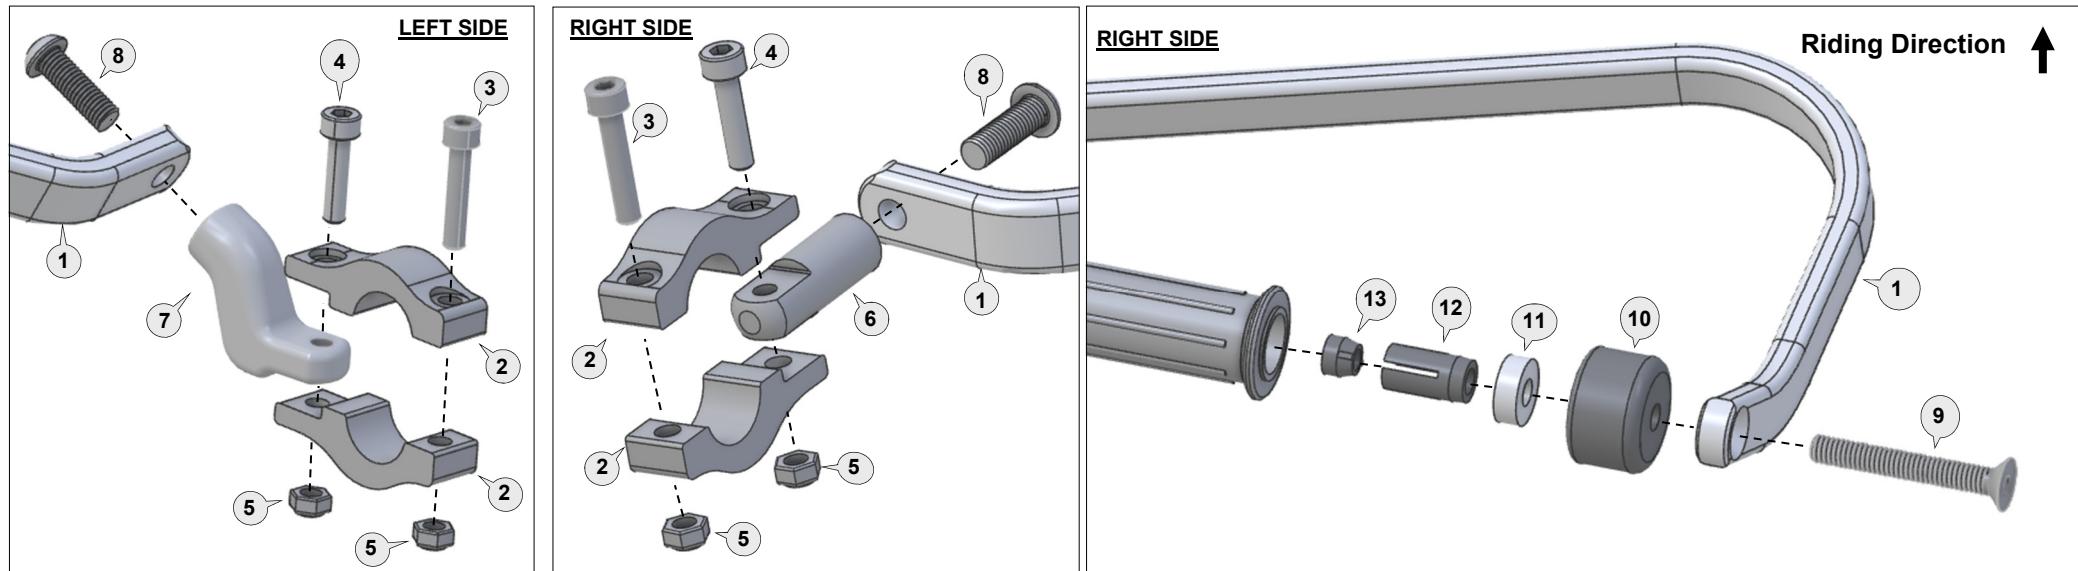


Installation


For Right Side: Repeat assembly instruction for left side

- Loosely assemble the clamp (2) and clamp connector (6) to the handlebar as per diagram.
- Attach the handguard backbone (1) with applicable parts to the handlebar then attached to clamp connector (6)
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts to the specified torque (over page) in the following order: (9), (8), (4) then (3).

Bar Side View

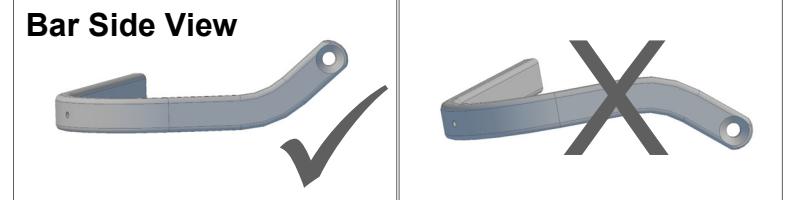

1 Aluminium Bar 	2 Clamp Saddles 	3 Socket Head Bolt 30mm 	4 Socket Head Bolt 25mm 	5 Nylock Nut 6mm 	6 Clamp Connector 	7 Clamp Connector 	8 Button Head Bolt 25mm 
PN: BAR-V-069 Pcs. Left/Right Pair	PN: CS-STD Pcs. 2 pairs	PN: M6X30SHCSZP Pcs. 2	PN: M6X25SHCSZP Pcs. 2	PN: M6LN Pcs. 4	PN: CP4 Pcs. 1	PN: CP5 Pcs. 1	PN: M8X25BHCSZP Pcs. 2

9 Flat Head Bolt 60mm 	10 Bar End Weight 	11 Spacer (7mm) 	12 Bar End Expander 	13 Nut 12mm - Two wings 
PN: M8X60FHCSZP Pcs. 2	PN: BEW35 Pcs. 2	PN: SP07-20-8 Pcs. 2	PN: BBE14A Pcs. 2	PN: NUT12 Pcs. 2

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (14.8 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight. Please note that all Rideworx test fitment are done on stock motorcycles with factory standard handle bar, windscreens, etc. in their original positions.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

Personalise Your Protection
Guard options sold separately

JET

JET-003

VPS

VPS-003

Storm

STM-003

CARBON

BCF-003



RIDEWORX

Email: info@barkbusters.net



@BARKBUSTERSHANDGUARDS

Barkbusters