

# CARENABRÍS PARA WINDSHIELD FOR WINDSCHUTZSCHEIBE FÜR BE FÜR KAWASAKI Z650

**Ref.: 9588**  
(Mod. SPORT)



**Ref.: 9369**  
(Mod. TOURING)



Mod. SPORT



Mod. TOURING



1 persona  
1 person

15 min

Fácil - Easy

Media-Intermediate


Difícil-Difficult

ALLEN

Nº 3

Nº 4

| ID. | PIEZA/PART | DESCRIP.                                                            | QTY. |
|-----|------------|---------------------------------------------------------------------|------|
| 1   |            | Carenabrís SPORT<br>SPORT windshield (Ref. 9588)                    | 1    |
|     |            | Carenabrís TOURING<br>TOURING windshield (Ref. 9369)                |      |
| 2   |            | Soporte metálico derecho<br>Right metal support                     | 1    |
| 3   |            | Soporte metálico izquierdo<br>Left metal support                    | 1    |
| 4   |            | Tornillo Allen M5x16 Ø11 ISO 7380<br>M5x16 Ø11 ISO 7380 Allen screw | 4    |
| 5   |            | Tornillo Allen M5x20 Ø11 ISO 7380<br>M5x20 Ø11 ISO 7380 Allen screw | 4    |
| 6   |            | Silentblock M5<br>M5 Silentblock                                    | 4    |
| 7   |            | Arandela de nylon M5x0,5<br>M5x0,5 nylon washer                     | 4    |
| 8   |            | Arandela de nylon Ø6.2xØ12x3mm<br>Ø6.2xØ12x3mm nylon washer         | 4    |
| 9   |            | Tapón tornillo M5 ISO 7380<br>M5 ISO 7380 screw cap                 | 4    |

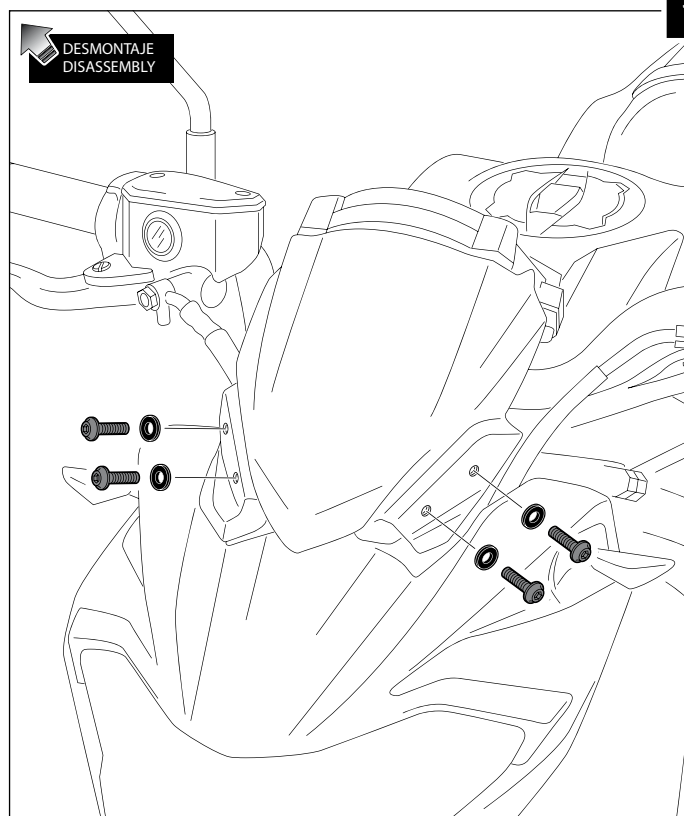

# CARENABRÍS PARA - WINDSHIELD FOR - WINDSCHUTZSCHEIBE FÜR KAWASAKI Z650

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

