

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN


Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com


www.puig.tv - www.puigusa.com



MOD. TRAFIC

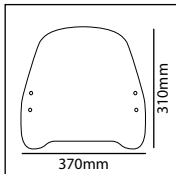

MOD. URBAN

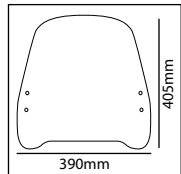

### PREVENCIÓN

- Usar agua y jabón neutro para limpiar la pantalla.
- Revisar periódicamente el apriete de la tornillería.
- Estacionar el scooter en dirección al sol, evitando el efecto lupa que puede dañar algunas partes.
- Aparcar si es posible en superficies niveladas.

Gracias por su atención.

### PREVENTION

- Use water and neutral soap to clean the windshield.
- Check the tightening of the fasteners periodically.
- Park the scooter facing the sun, avoiding the sun-reflection effect that may damage some parts.
- Park if possible on even surfaces.

Thanks for your attention.

| ID. | DESCRIPCIÓN                    | DESCRIPTION                   | QTY. |
|-----|--------------------------------|-------------------------------|------|
| 1   | Pantalla                       | Windshield                    | 1    |
| 2   | Tapa exterior                  | Exterior cap                  | 2    |
| 3   | SopORTE rótula exterior        | Ball bearing exterior support | 2    |
| 4   | SopORTE rótula interior        | Ball bearing interior support | 2    |
| 5   | Tornillo allen M5x20 DIN912    | M5x20 DIN912 allen screw      | 4    |
| 6   | Tuerca M5 DIN982 autofrenado   | M5 DIN982 lock nut            | 4    |
| 7   | Tornillo phillips M5x13        | M5x13 phillips screw          | 4    |
| 8   | Varilla recta Ø9x180           | Straight rod Ø9x180           | 2    |
| 9   | Tapón final varilla            | Final bar cap                 | 2    |
| 10  | Tornillo M6x35 DIN912          | M6x35 DIN912 screw            | 2    |
| 11  | SopORTE guía sujección varilla | Rod guide support             | 2    |
| 12  | Acoplamiento esquadra          | Coupling angle                | 2    |
| 13  | Esquadra Ref.:581              | Angle Ref.:581                | 2    |
| 14  | SopORTE retrovisor             | Mirror support                | 2    |
| 15  | Tornillo M8x35 DIN913          | M8x35 DIN913                  | 2    |
| 16  | Tuerca M8 DIN6923              | M8 DIN6923 nut                | 2    |
| 17  | Caperuza plana M6              | M6 cover                      | 2    |
| 18  | Caperuza plana M8              | M8 cover                      | 4    |
| 19  | Casquillo Ø14xØ8x15            | Ø14xØ8x15 spacer              | 2    |
| 20  | Tuerca M6 DIN6923              | M6 DIN6923 nut                | 2    |
| 21  | Tapón tornillo M6 DIN912       | M6 DIN912 screw cap           | 2    |
| 22  | Fuelle tapa taladro            | Below drill cover             | 2    |

## CARENABRÍS ADAPTABLE A - WINDSHIELD ADAPTABLE TO SYM HD2 125/200I

Mod.: TRAFIC  
Ref.: 6373

Mod.: URBAN  
Ref.: 8476

